G2 123 Programming

Part Number(s): 28C0004



Programming with 123 Firmware


	iming with 123 Firmware		
1	Turn the controller OFF	OFF OZ	
2	Connect 10 Pin cable between Motor and BOB board. Connect AC power cord.		
3	Attach a wired OR wireless wall switch Disable any motion detectors or IR Beams	WALL MOTION IS P	
4	Manually OPEN the door One-Way: Open 2 feet from closed Bi-Part: Open 4 feet from closed	Open a total of 2 feet Open a total of 4 feet	
5	Turn DIP switches <u>ON</u>	Both	
6	Power ON the controller then Verify 123 firmware w/LED's Then the panel(s) will move 6-12" towards Open OR Closed	Power ON Version LED's	
7	Wait 5 seconds, after the door stops Then press the keypad's Open OR Close button (depending on the direction the door moved in step 6.)	Wait 5 Seconds! OPEN or CLOSE	
8	Slide the panel to its fully closed position and the press the Close button.	Fully CLOSE the door(s)	
9	For OPTIONAL manual Run & Crawl speed adjustments skip to step 9opt Slide the door(s) to their fully open position and press Open Proceed to step 10	Fully OPEN the door(s)	


800-426-7113 Technical Document Number Rev. 1.006 2018-03-26



G2 123 Programming

Part Number(s): 28C0004

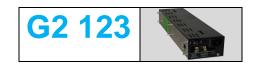

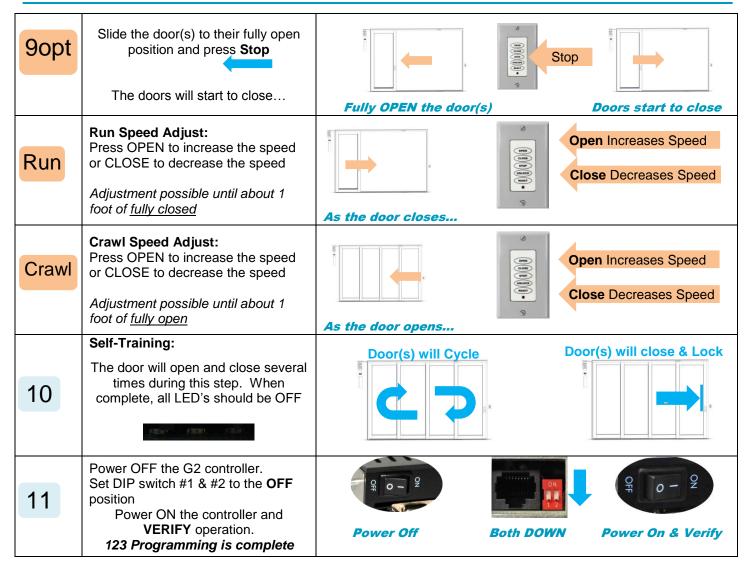

Runtime LED Functions



Function	LED	Run Speed	Crawl Speed
Opening	1001 1001	Green Fast Flash	Green Slow Flash
Closing	Amelia (mar. ameli	Yellow Fast Flash	Yellow Slow Flash
Overcurrent		Steady RED LED – Stays on until next function	

