


G1D Programming Without IDEC Counter

Part Number(s): G1D

1. Turn **OFF** controller, **Figure 1**, and **Disconnect** the black lead wire to the battery backup.
2. Move program jumper to top 2 pins (Program mode). **Figure 2**.
3. With doors in the **CLOSED** position, reconnect black battery wire to the battery.
Turn switch on front of control box back **ON**. **Figure 1**
4. The red light on the wall switch should be **ON**, if in program mode. **Figure 4**.
5. Manually push **Door 1** to the fully **OPEN** position.
Manually push **Door 2** to the fully **OPEN** position.
6. Press and Hold **RESET**, on wall switch for 15 seconds.
7. Move program jumper to bottom 2 pins (Normal mode) **Figure 2**
8. If this is the first time the system has been operated:
 - a. Manually move **Door 2** to closed position, you should hear the magnetic brake lock. Verify the magnetic brake is engaged.
You should not be able to manually reopen the door.
 - b. Manually move **Door 1** to closed position, you should hear the magnetic brake lock. Verify the magnetic brake is engaged.
9. If either door did not lock, power the system off, and change the encoder connection at the corresponding motor's break out board.
 - a. Change the RJ45 "**ENC A-B**" to "**ENC B-A**" or vice versa. depending how the connection was initially made. **Figure 3**
 - b. After changing the connection restart this procedure from **Step 1**.
10. If both doors locked in the closed position, Press **UNLOCK** and manually move both doors a few feet open.
 - a. Press **CLOSE** on the wall switch and observe the direction the doors move.
 - b. If either door moves in the wrong direction press **STOP**. Reverse the **Red & Black** power wires on the motor that moved in the wrong direction. **Figure 4**

*The motor polarity connection can be swapped inside the controller **OR** at the BOB.*

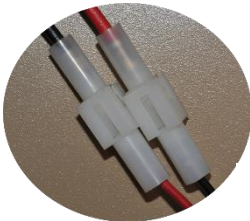

OR

Figure 4 – Reverse Motor Polarity



Figure 3 – BOB Board Swap Encoder



Figure 1 - Main Power


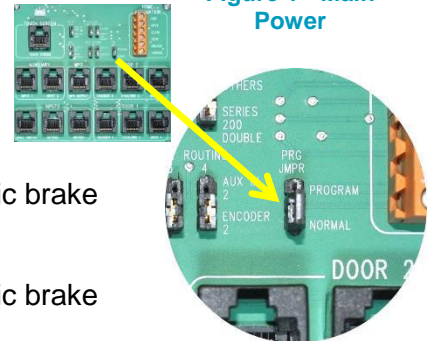


Figure 2 - Programming Mode

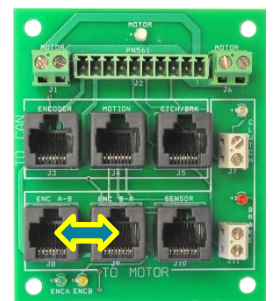

11. Press **CLOSE** on wall switch. Doors should close & lock.
12. In case of power loss and the doors do not operate OR are locked the in an open position:
Press **UNLOCK** on the wall switch.
Manually close doors.
Press and hold **RESET** for 15 seconds.

If anything interrupts a door operation and they fail to respond to the OPEN or CLOSE buttons,
Press **STOP**, then try again.
Only press **RESET** with doors in closed position.