


A Caldwell Company

QUICK START GUIDE

DOOR OPERATION:

Press the buttons on the Wall Switch to operate the door. Blue LED will light momentarily with all button pushes.

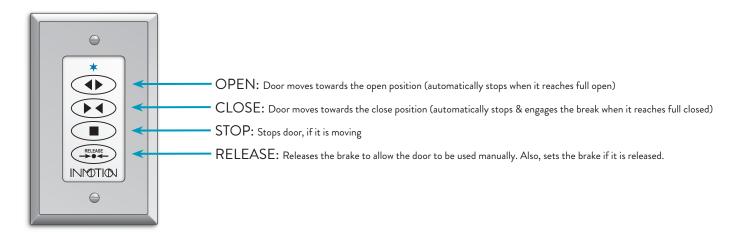

MANUAL OPERATION & MOTOR BRAKE:

The motor brake secures the door in the closed position when it is automatically or manually closed. To operate the

door manually, simply press RELEASE to disengage the motor brake.



The brake can be engaged and/or released while the door is in any location. Simply press the RELEASE button.

SYSTEM RESET:

In the event of power loss, the INMOTION Automation System may need to be reset.

To RESET: Close the door manually. Press and Hold STOP and RELEASE buttons simultaneously for 15 seconds.



(Gen 1 Wired)



A Caldwell Company

QUICK START GUIDE

SAVE YOUR INFORMATION:

Your Serial Number:	
Location of Your Control Panel(s):	-
Your Dealer & Installer Contact Information:	-

WARRANTY:

The INMOTION automation system has a 3 year limited warranty. Please visit the INMOTION website for more detailed information.

MAINTENANCE:

The INMOTION automation system requires little maintenance. The best protection for the continued trouble-free operation of your system is to keep the doors in good working order. Keep in mind that large sections of sliding doors can become troublesome due to settling of the structure causing the tracks to become unleveled. Ensure the tracks are kept clean and follow the maintenance requirements of the door manufacturer/dealer/installer.

FURTHER ASSISTANCE:

If you require further assistance, we are here to help! Our Sales, Customer Service & Technical Service teams can all be reached via:

Phone: 1-800-426-7113

Email: info@inmotion.email

Website: www.inmotion.company